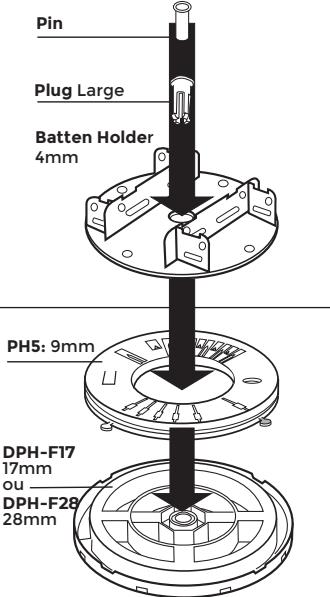
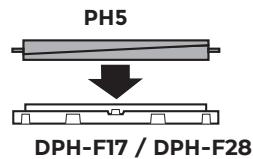
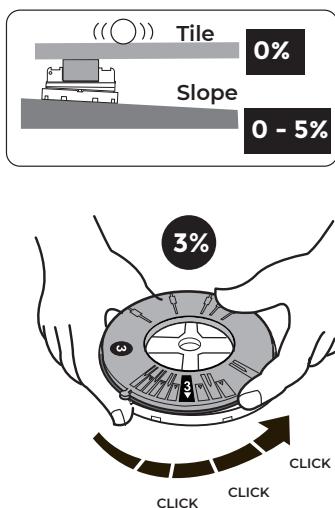
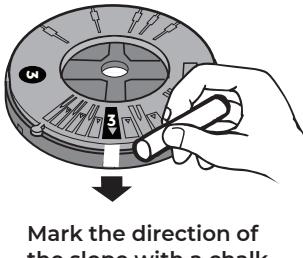
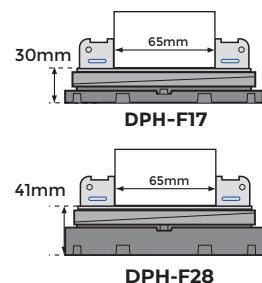
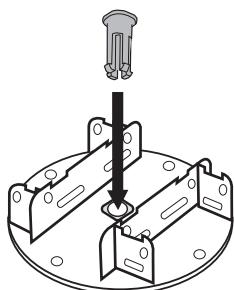
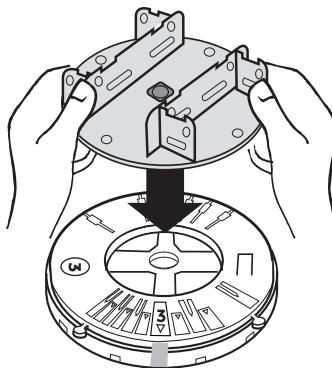
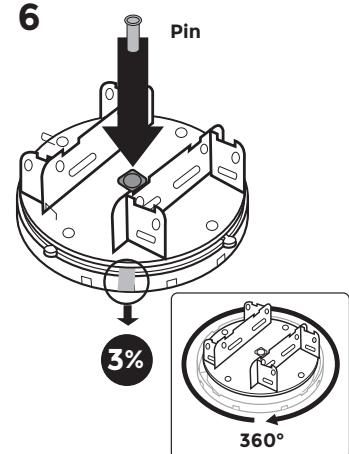
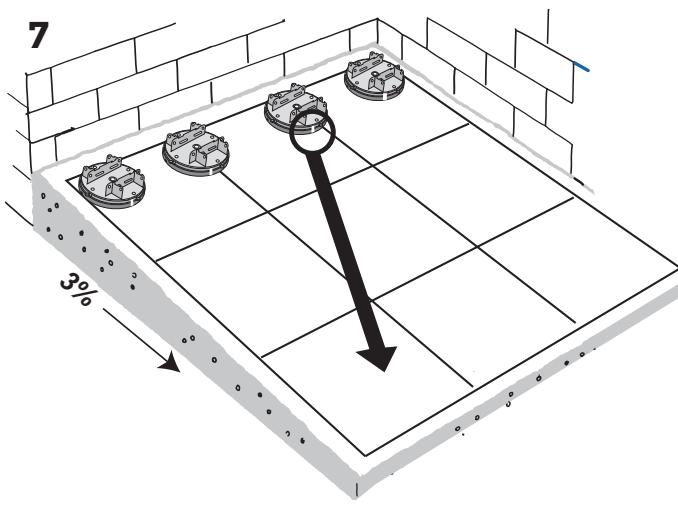

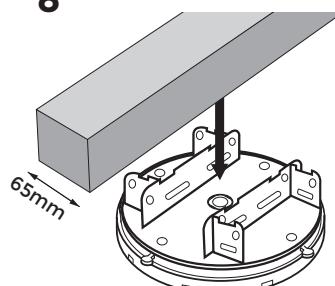
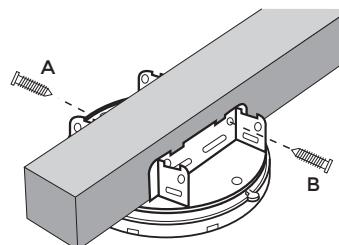
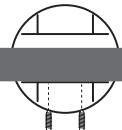
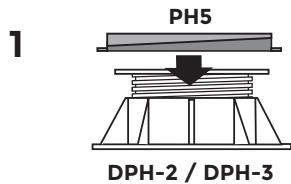
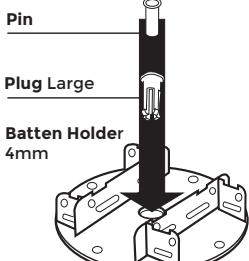
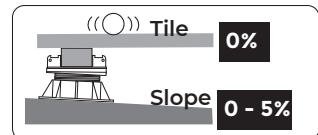
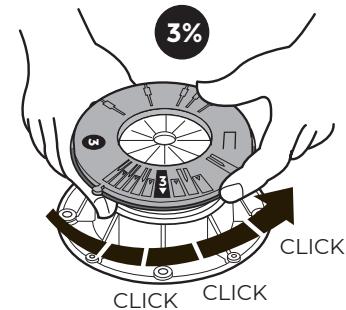
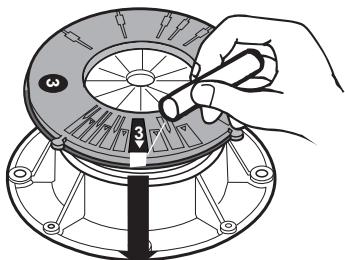







KIT-4

1

2

3

4

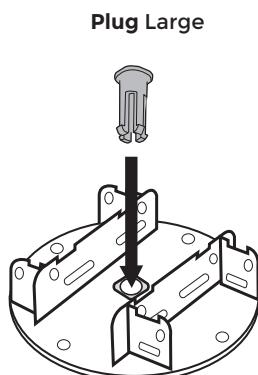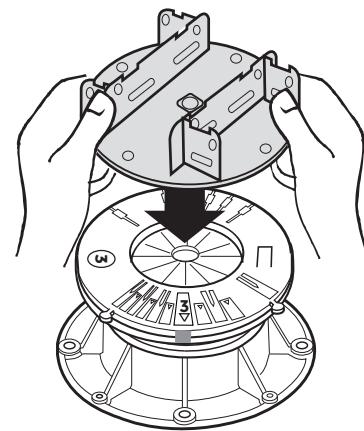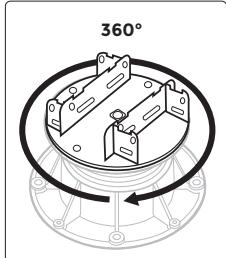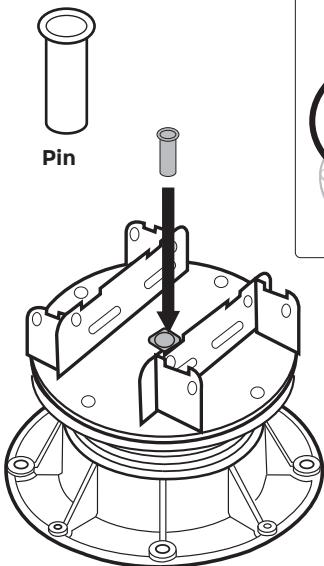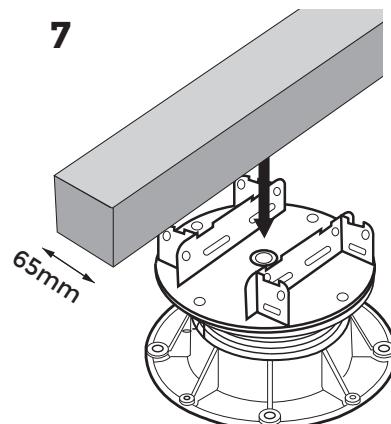4 Plug Large

5

6

7


Use the DPH-F17 and DPH-F28 pedestal on the first line because they are not adjustable in height for the following lines


8

9

<65mm


KIT-4

2

3%

3


Mark the direction of the slope with a chalk

4

5

6

7

8
