


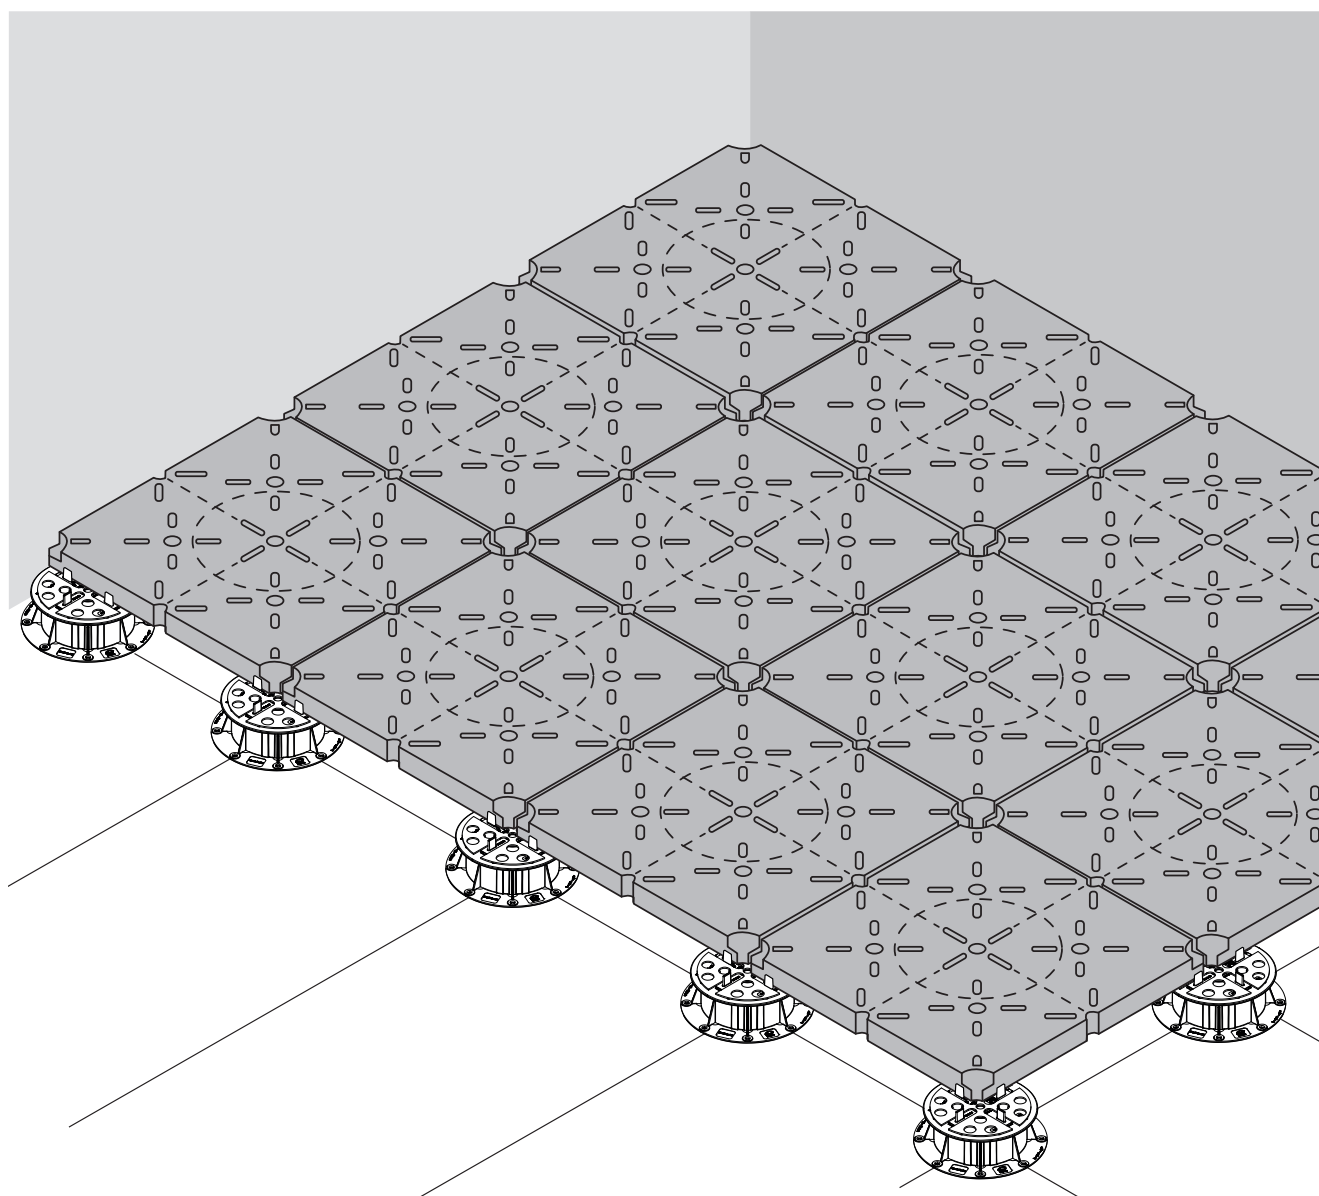


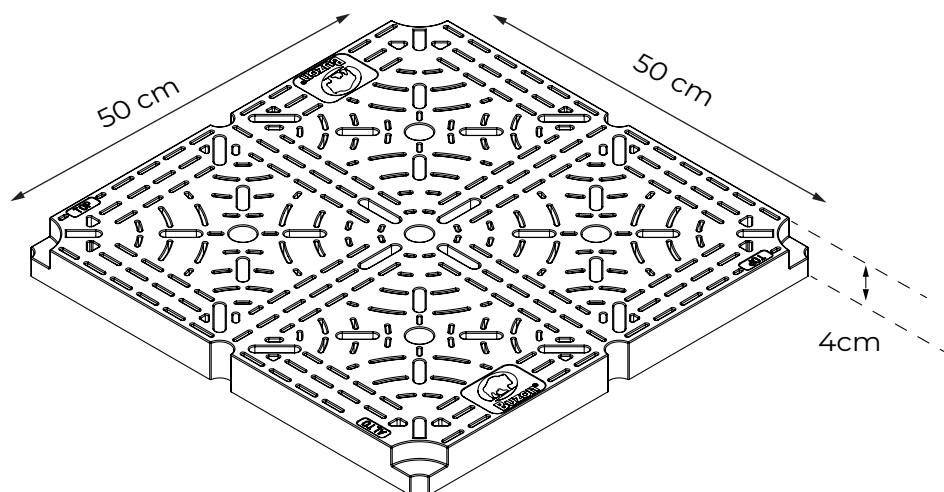


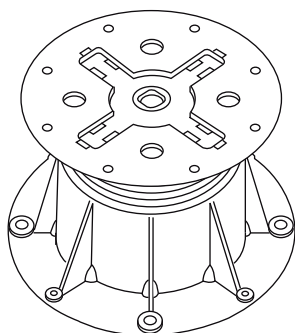


Vloerdrager

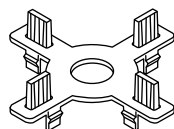


PB-TABS-3mm

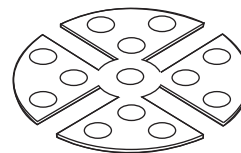

U-E20 2mm

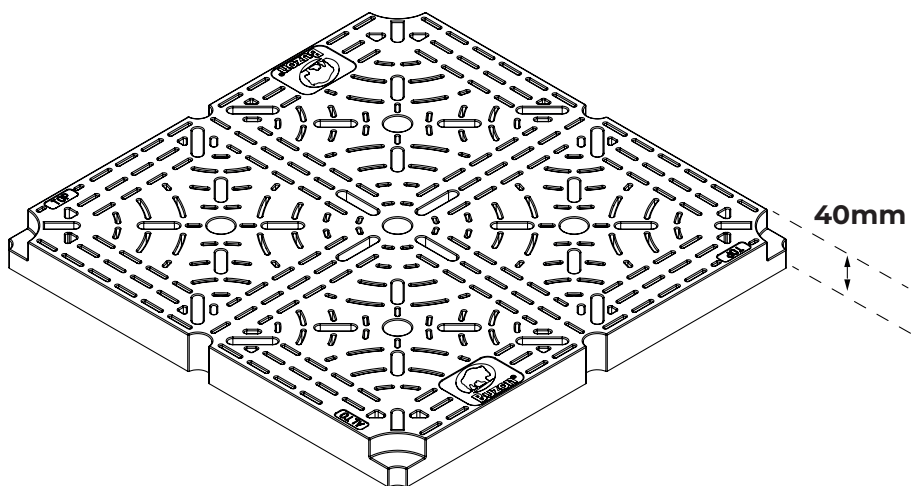

U-TRAY

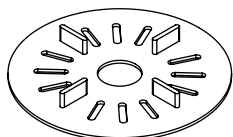

**U-TRAY-Tabs-2mm
U-TRAY-Tabs-3mm
U-TRAY-Tabs-4mm**




U-TRAY-LOCK

1


U-E20 2mm

PB-Tabs-3mm


PB-Series

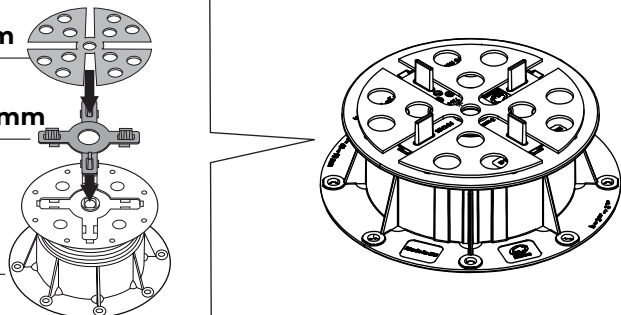


2

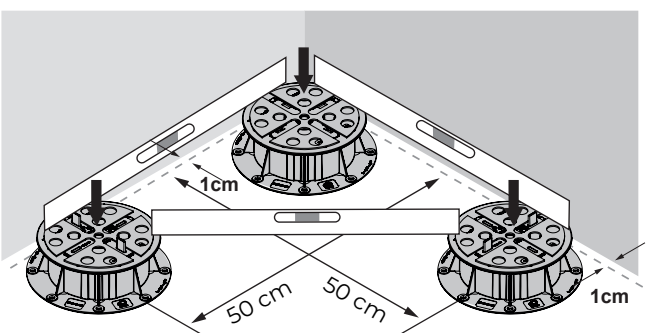


3

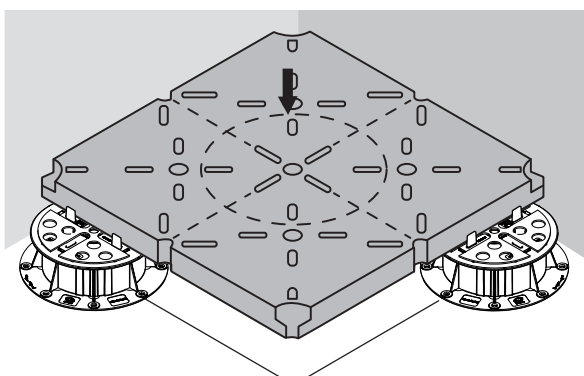


4

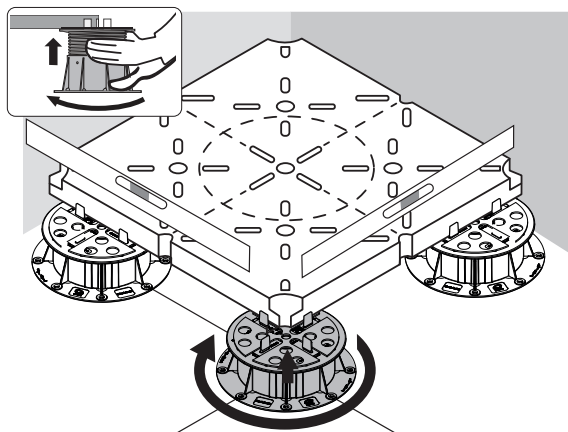


5

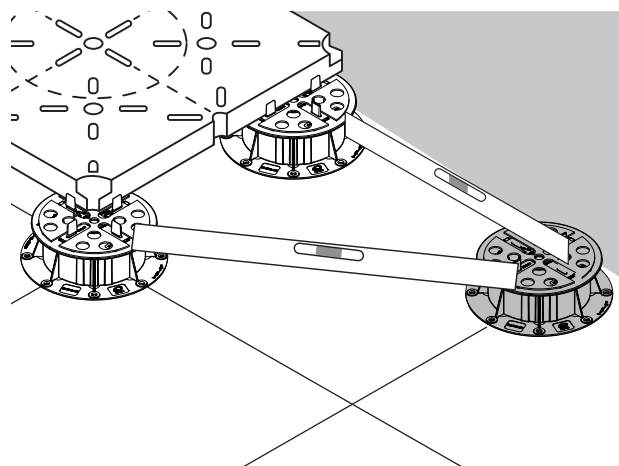


6

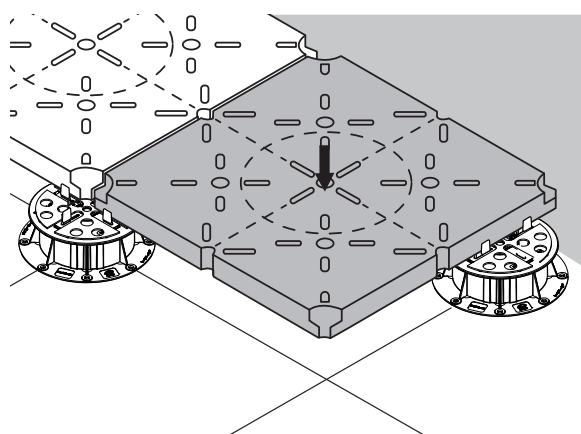


7

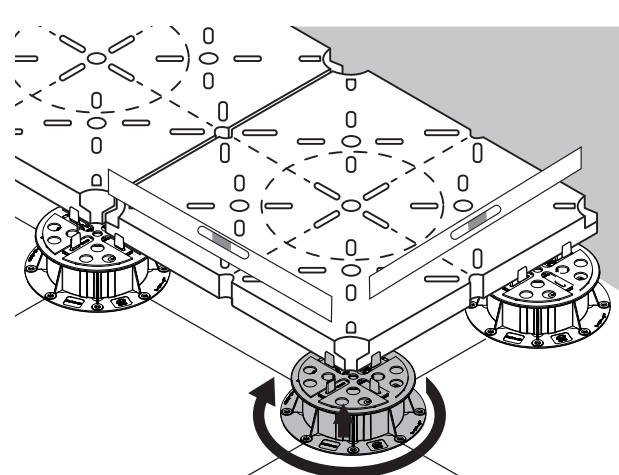


8

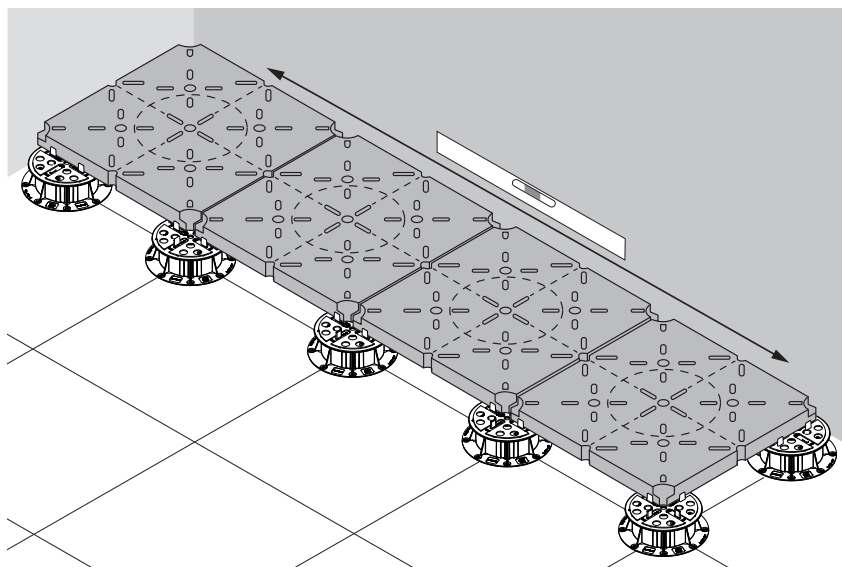


9

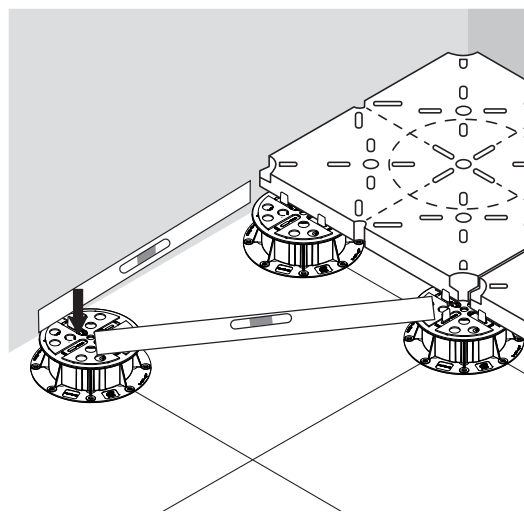


10

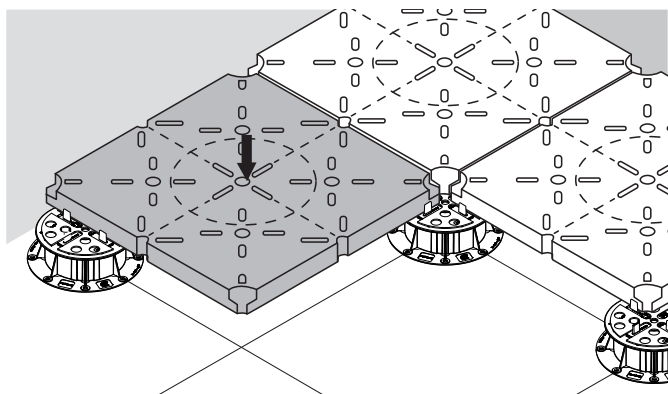


11

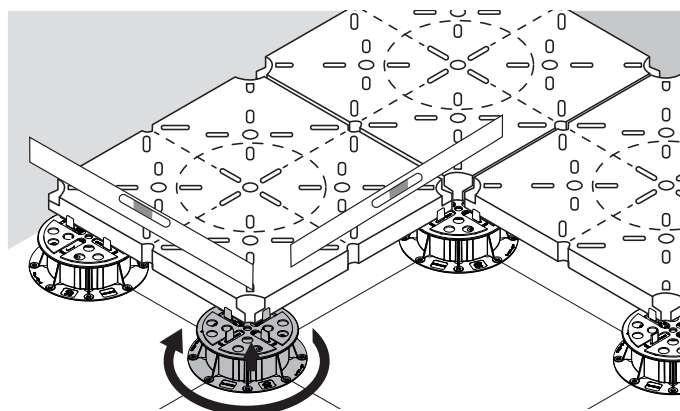


12

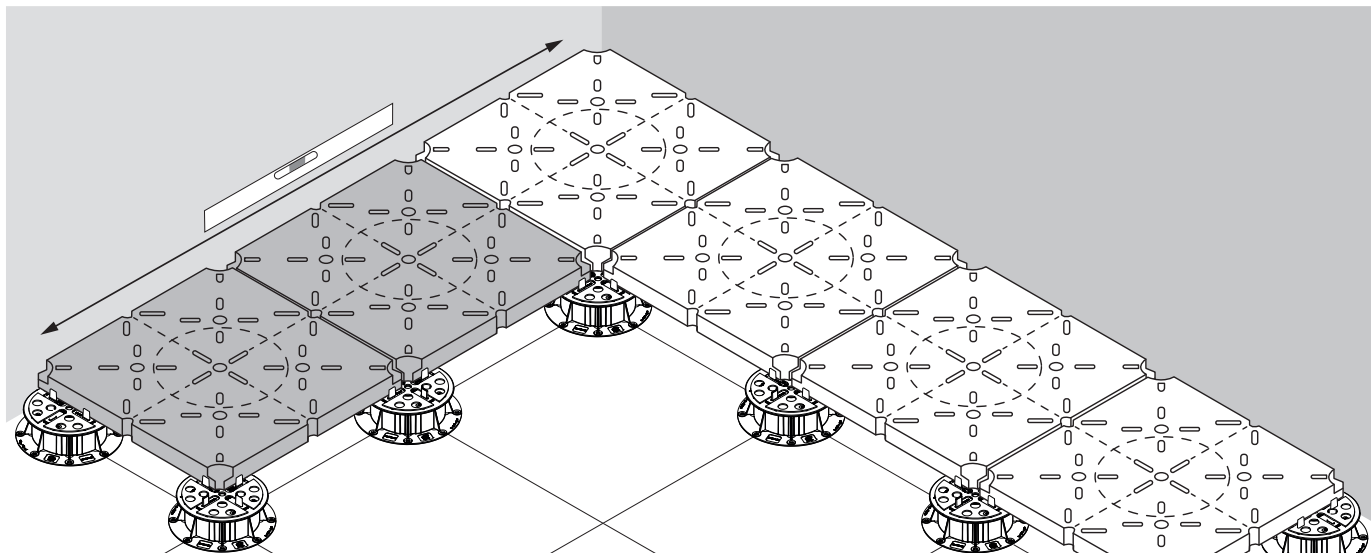



13

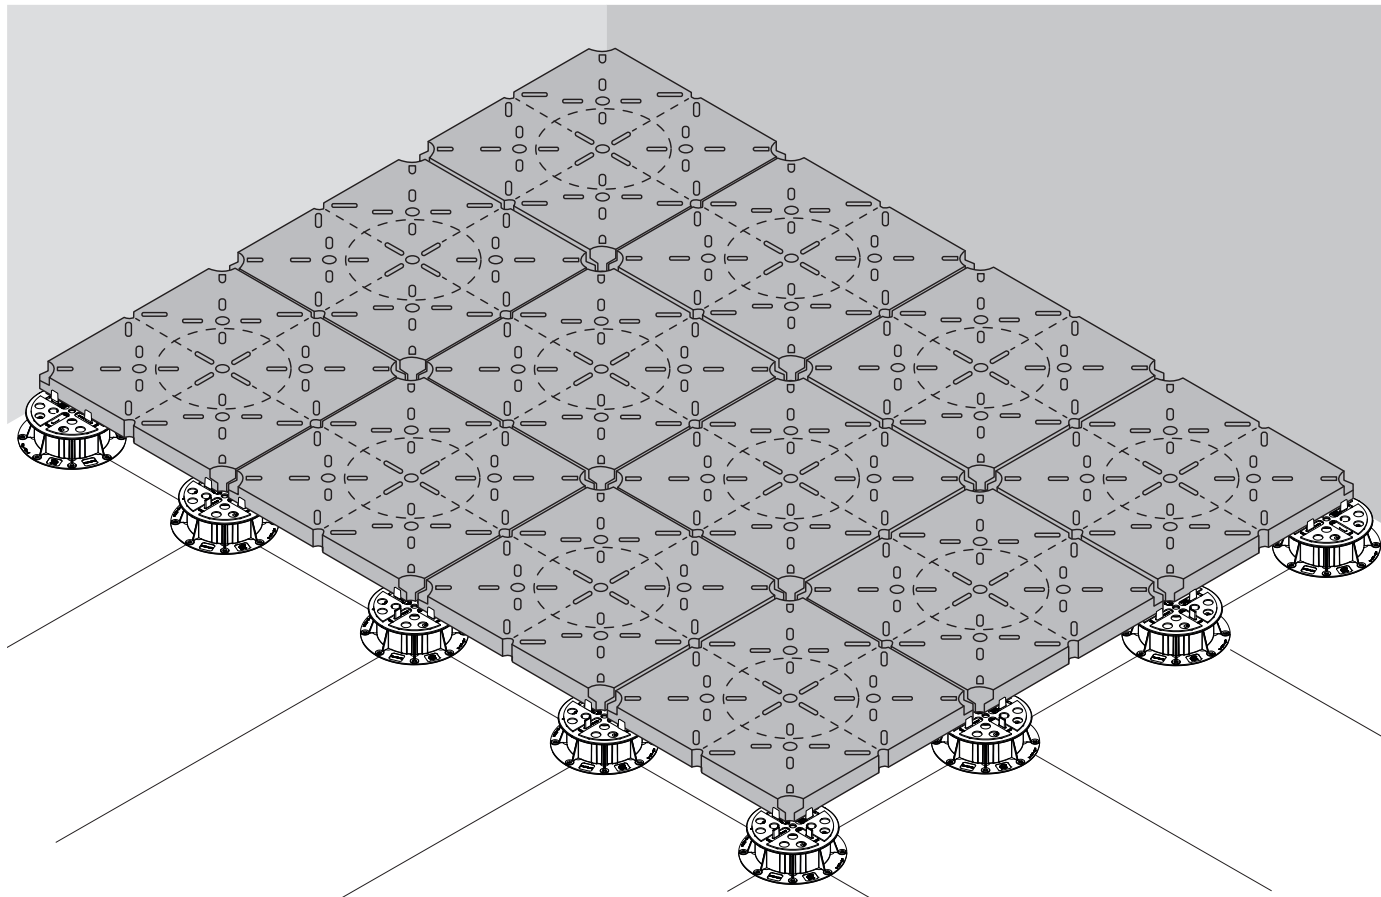



14 U-TRAY-LOCK

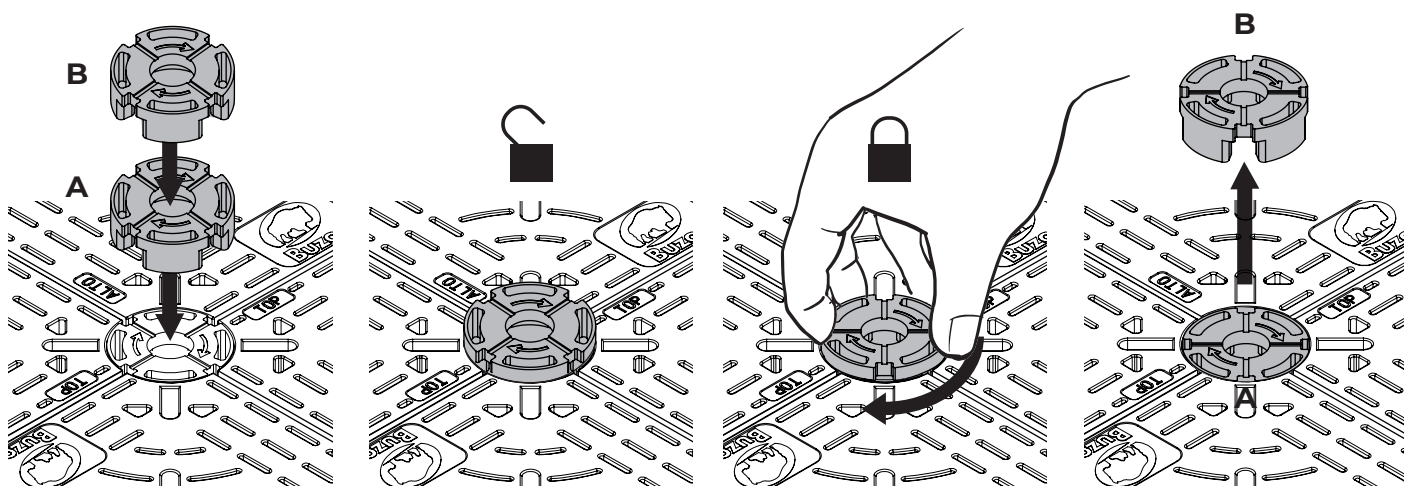


15

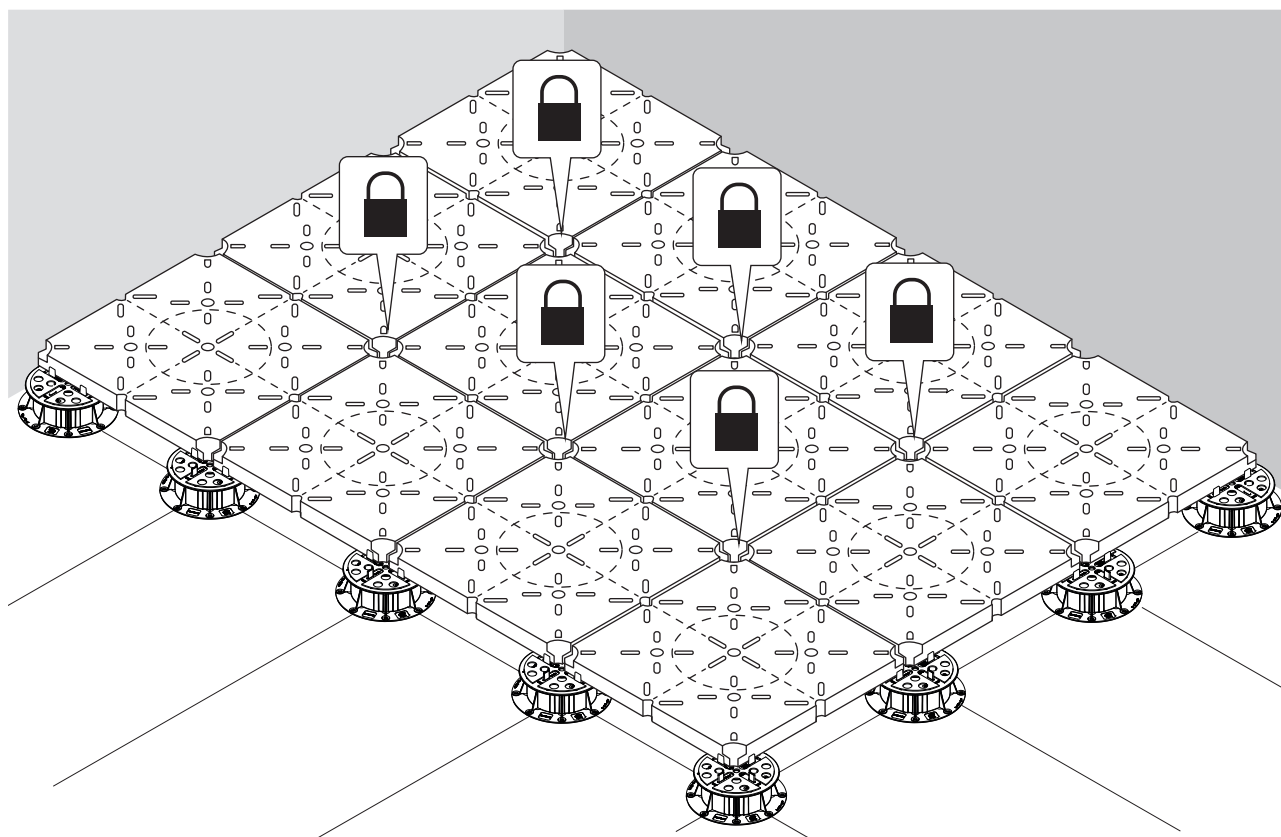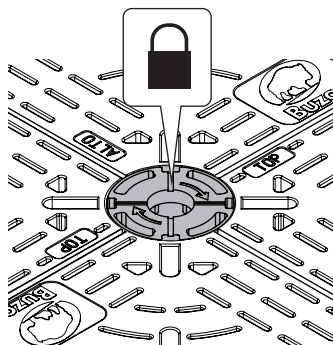



16 U-TRAY-Tabs-3mm

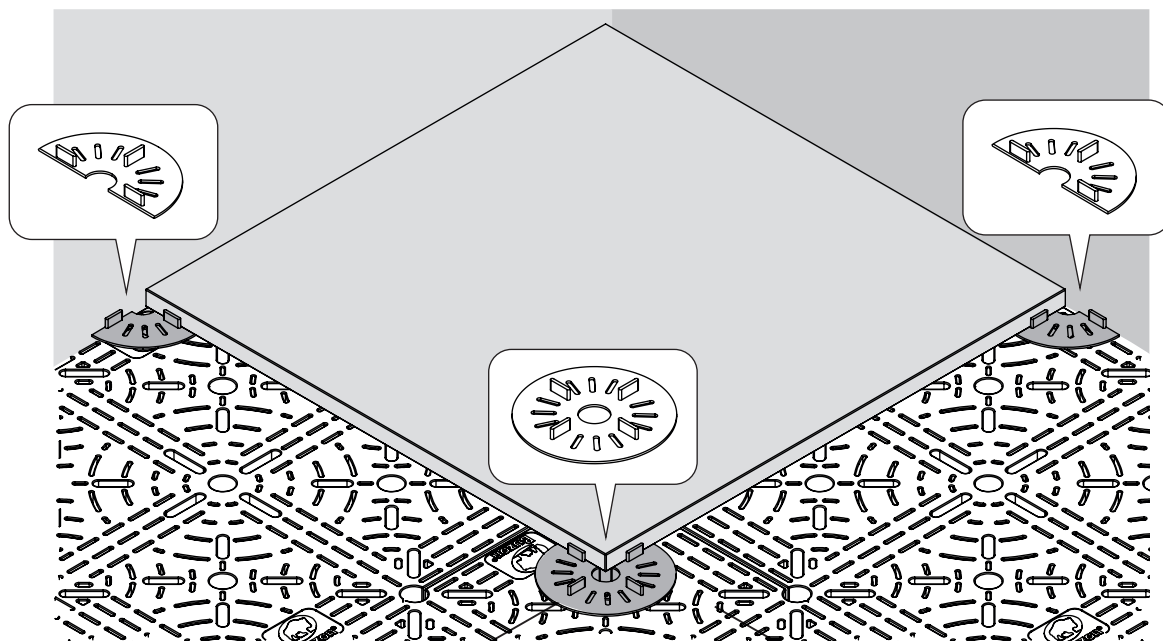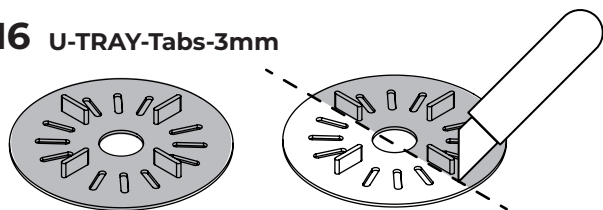


17

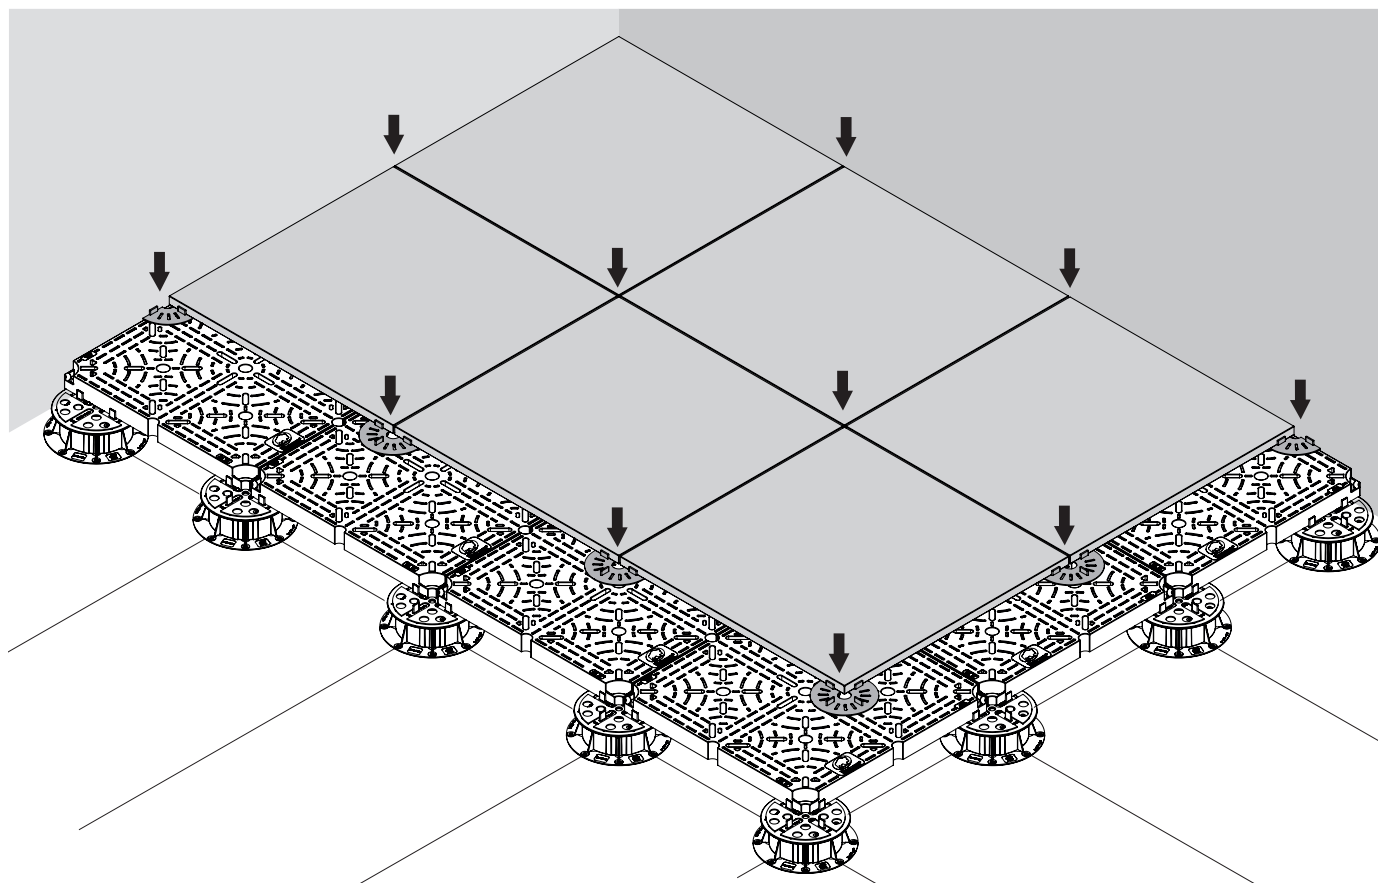


18 U-TRAY snijden

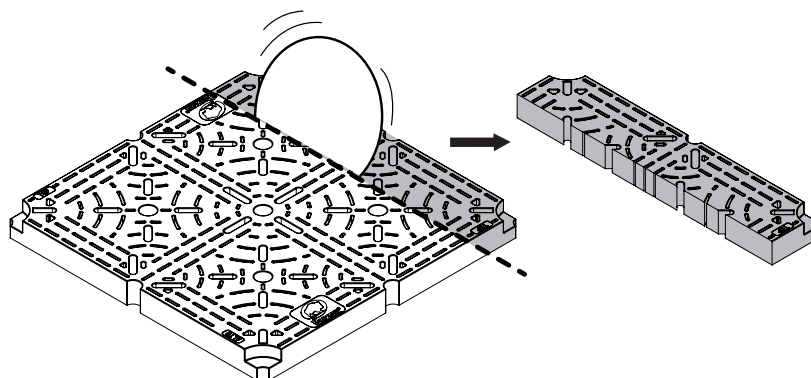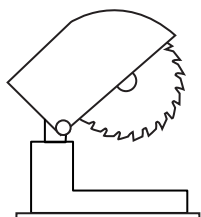

19

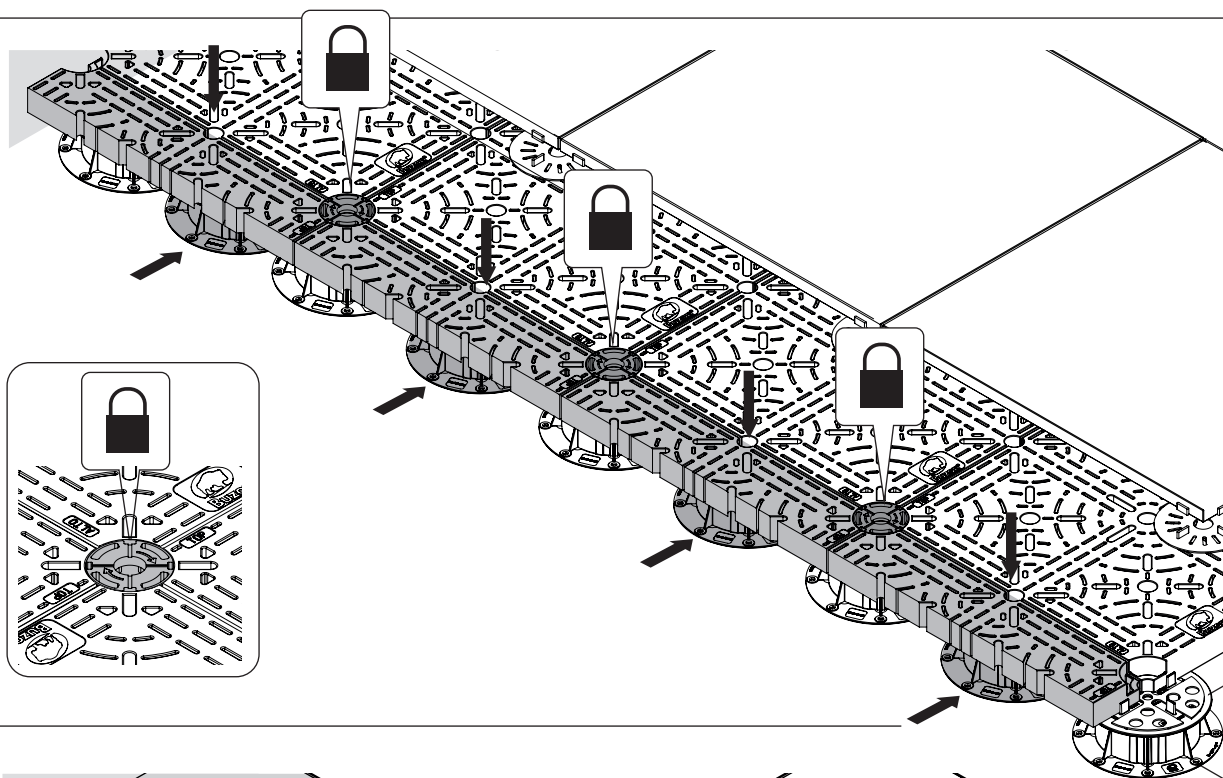

20

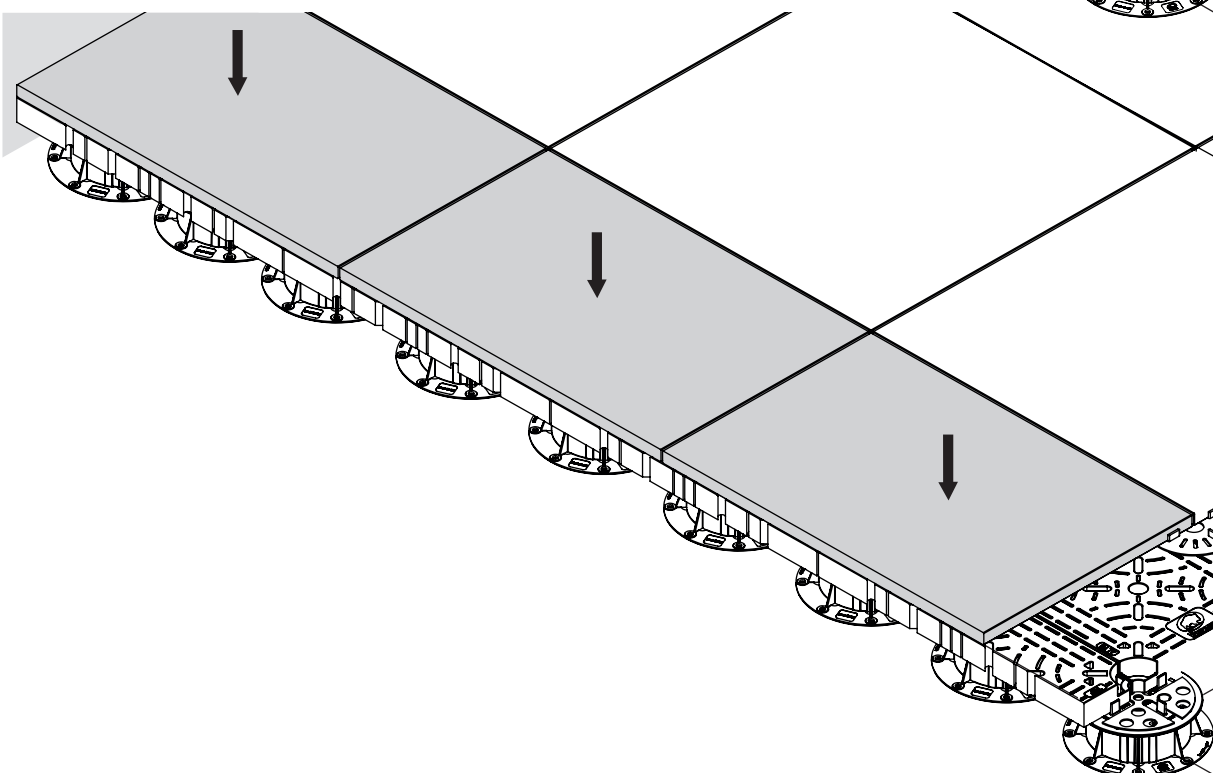

Gebruik met graszodenrol

