




Plot PB-Series

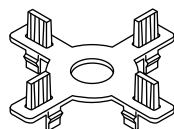

PB-TABS-3MM

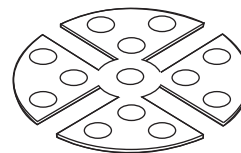


U-E20 2 mm

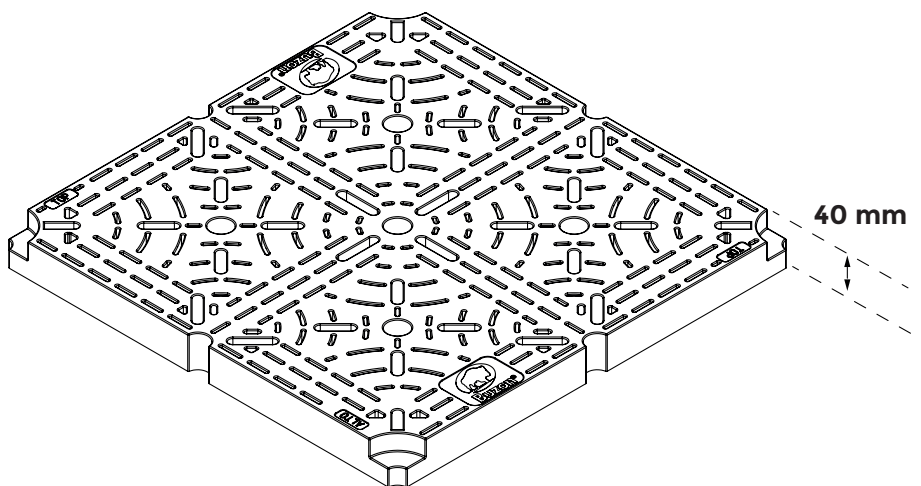


U-TRAY



U-TRAY-LOCK

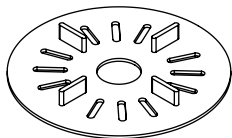


**U-TRAY-TABS-2MM
U-TRAY-TABS-3MM
U-TRAY-TABS-4MM**

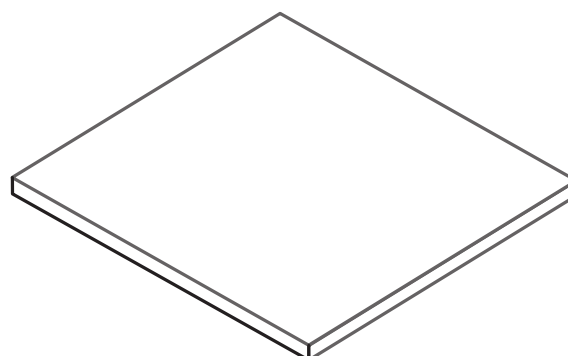

Dalle



Toujours placer
un plot sous le
centre de chaque
U-TRAY

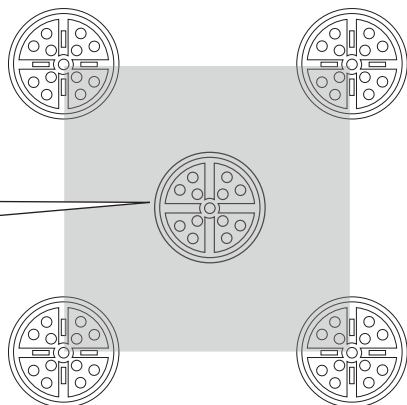


1


U-E20 2 mm

PB-TABS-3MM


PB-Series

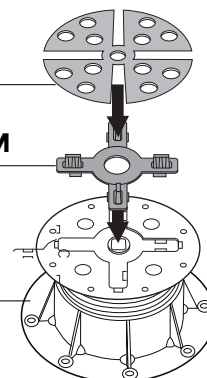


2

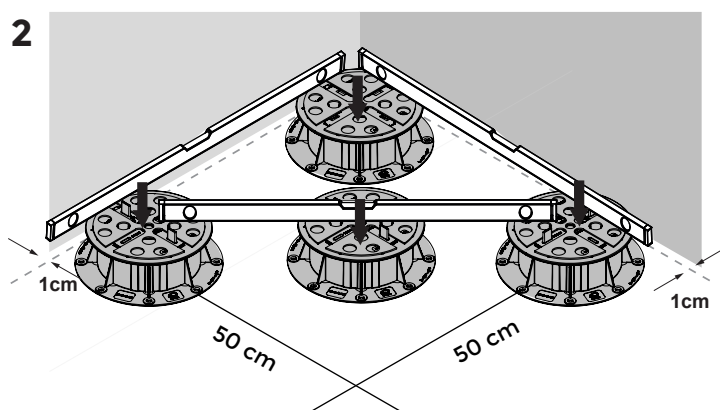


3

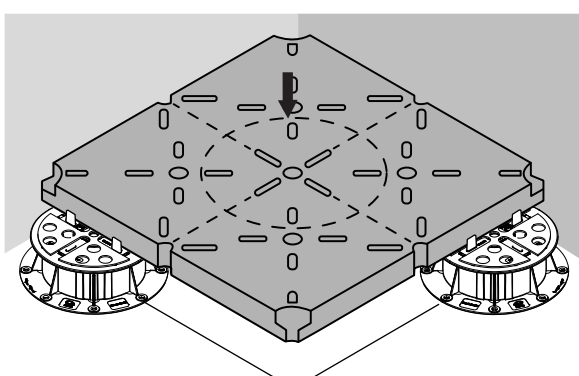


4

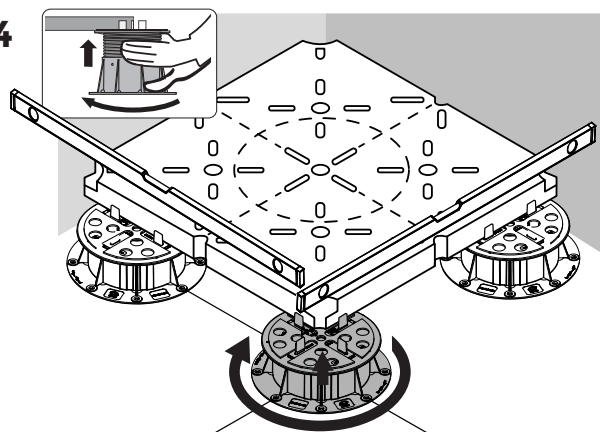


5

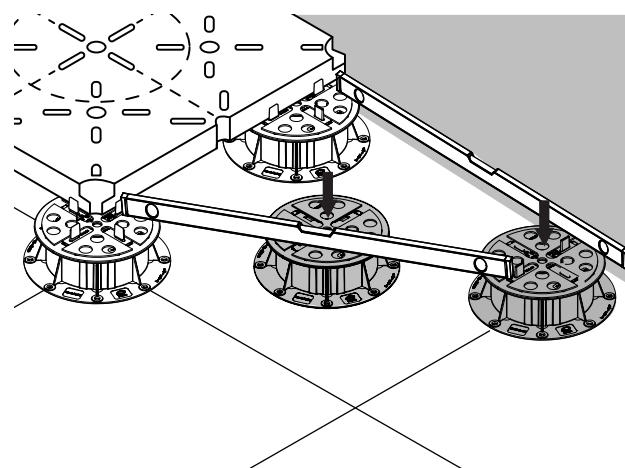


6

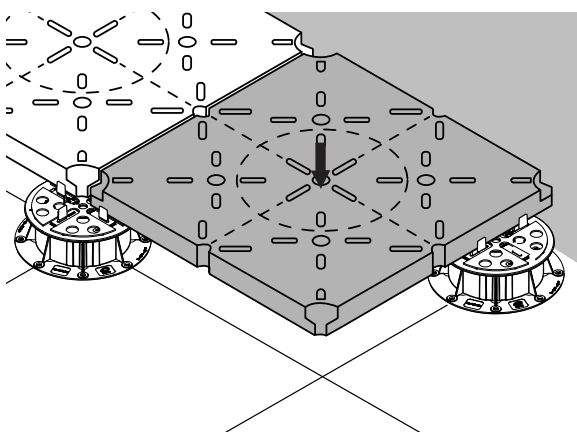


7

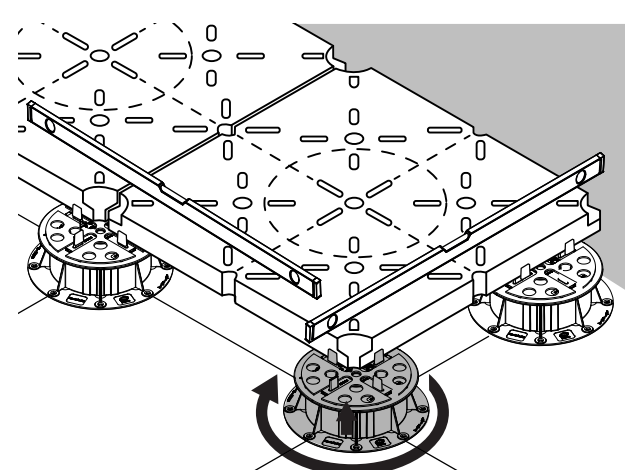


8

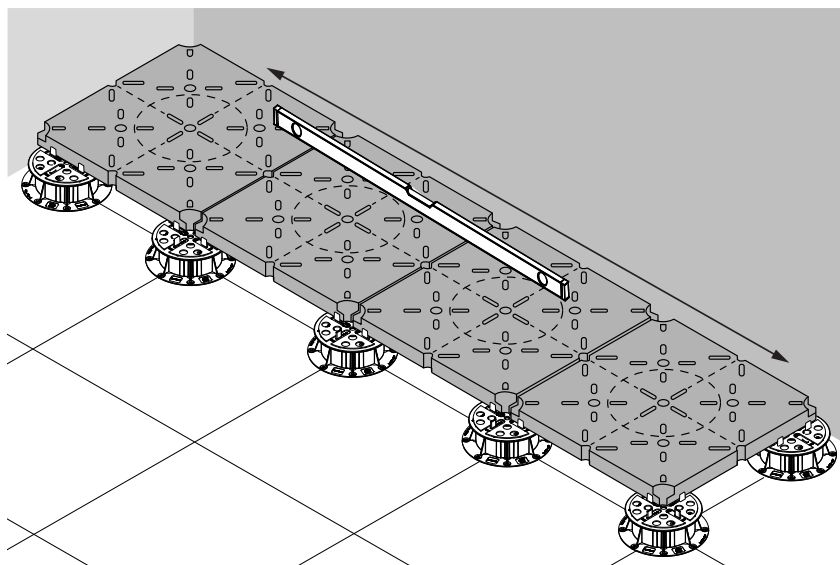


9

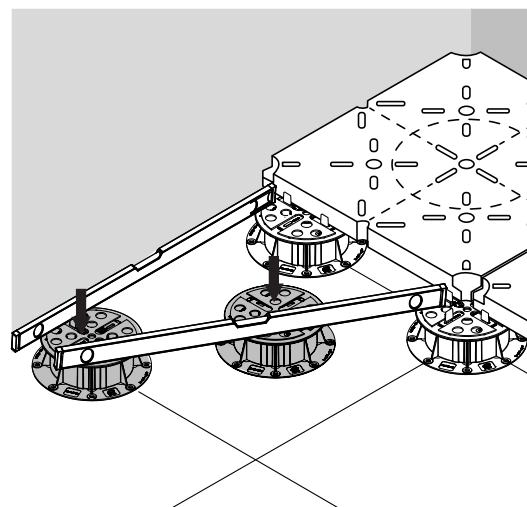


10

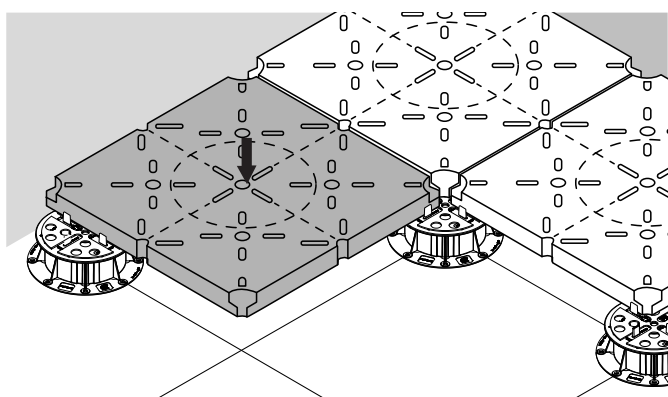


11

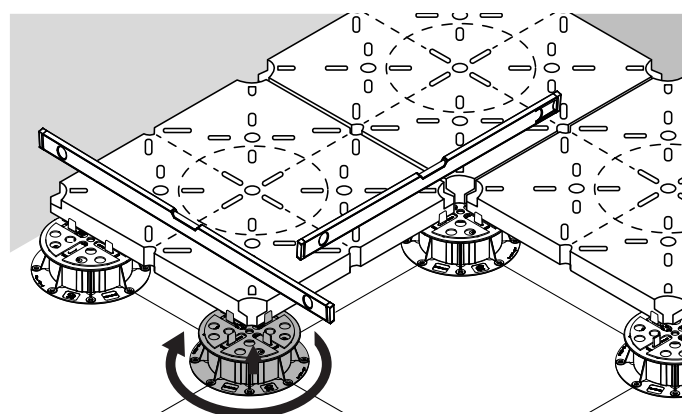


12

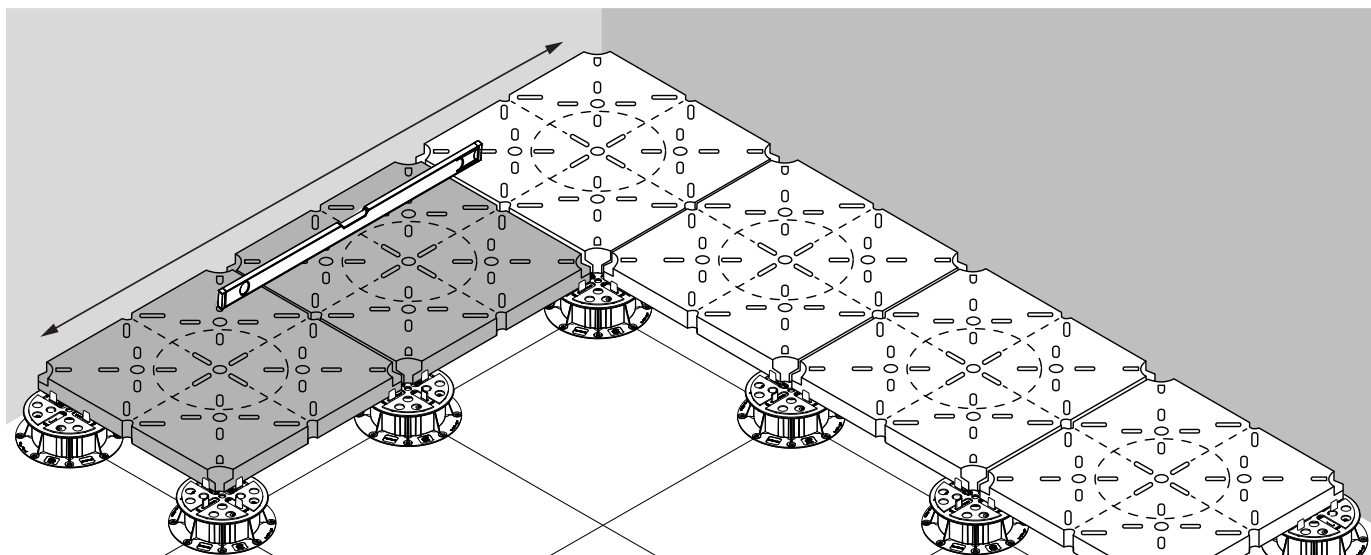


13

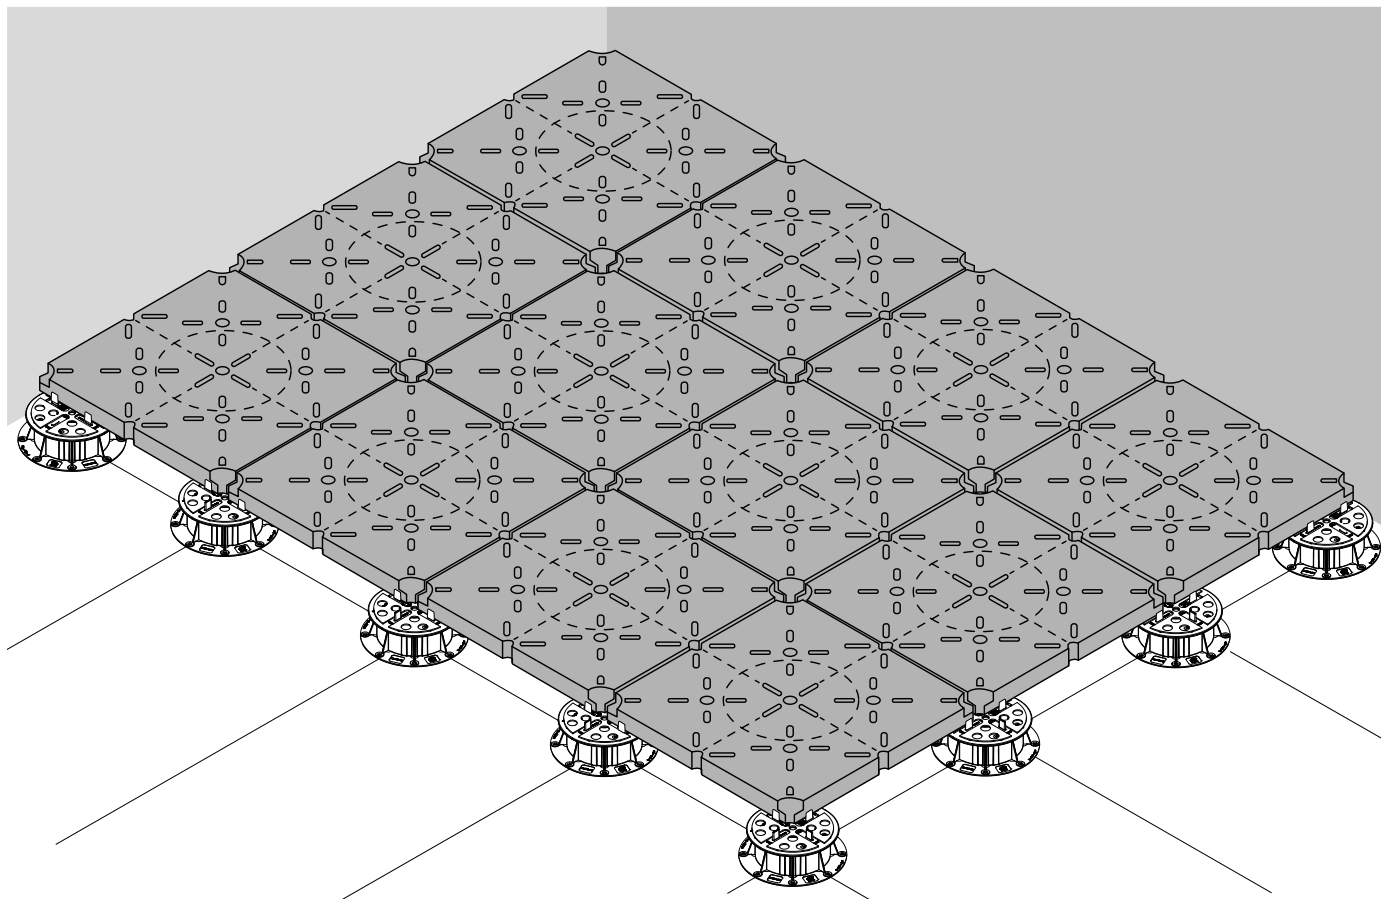



U-TRAY-LOCK

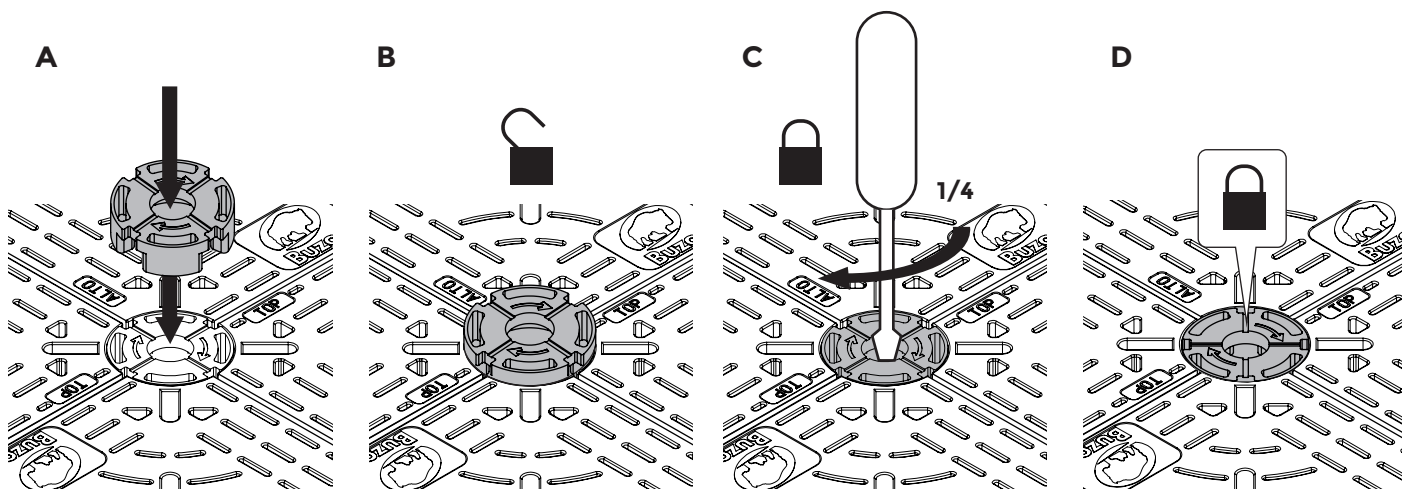


15

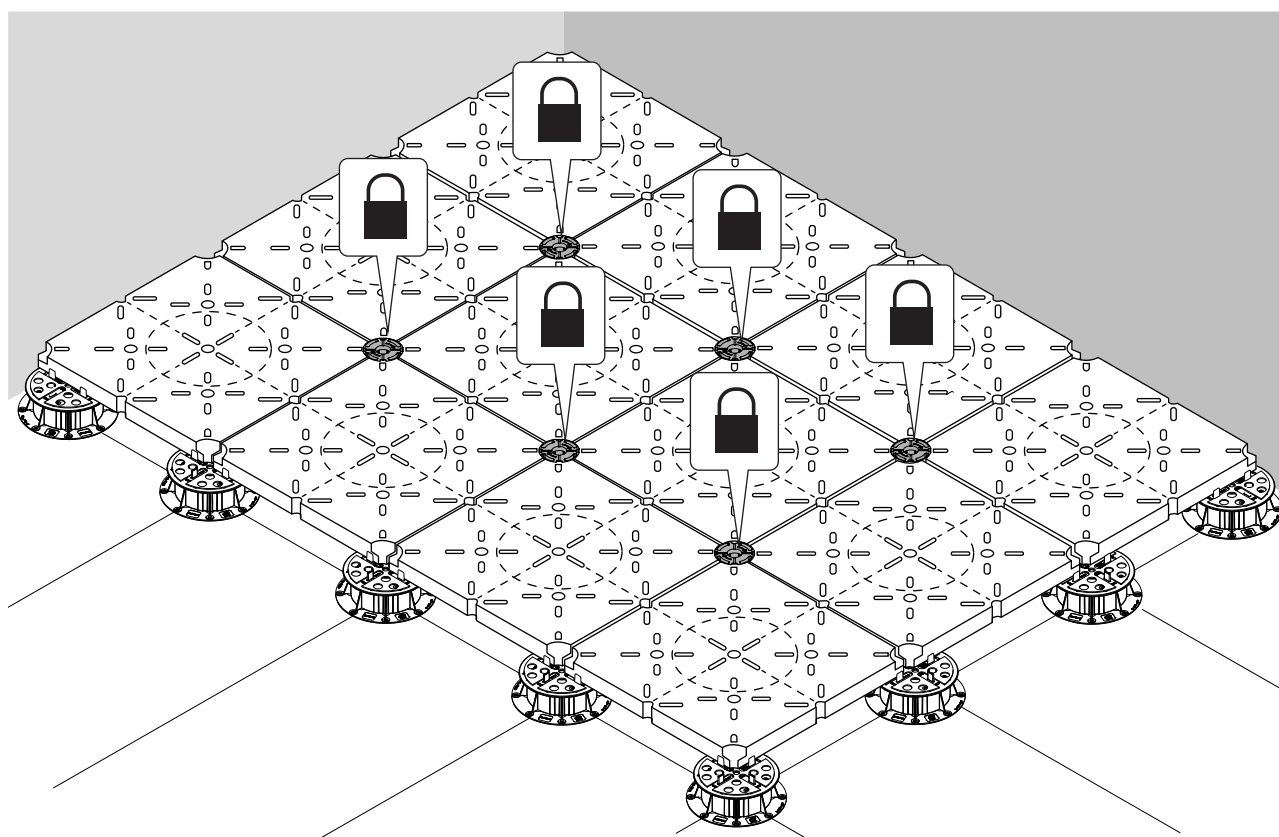



16 U-TRAY-TABS-3MM

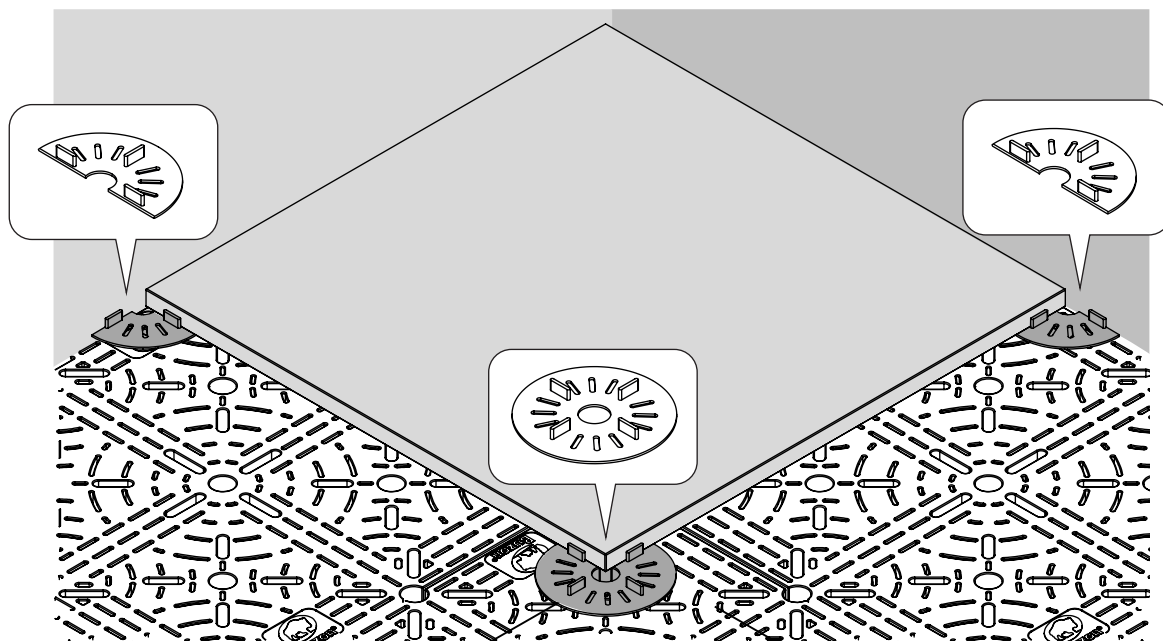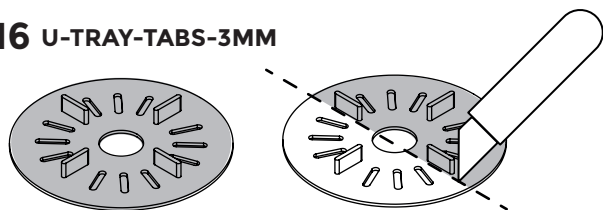


17

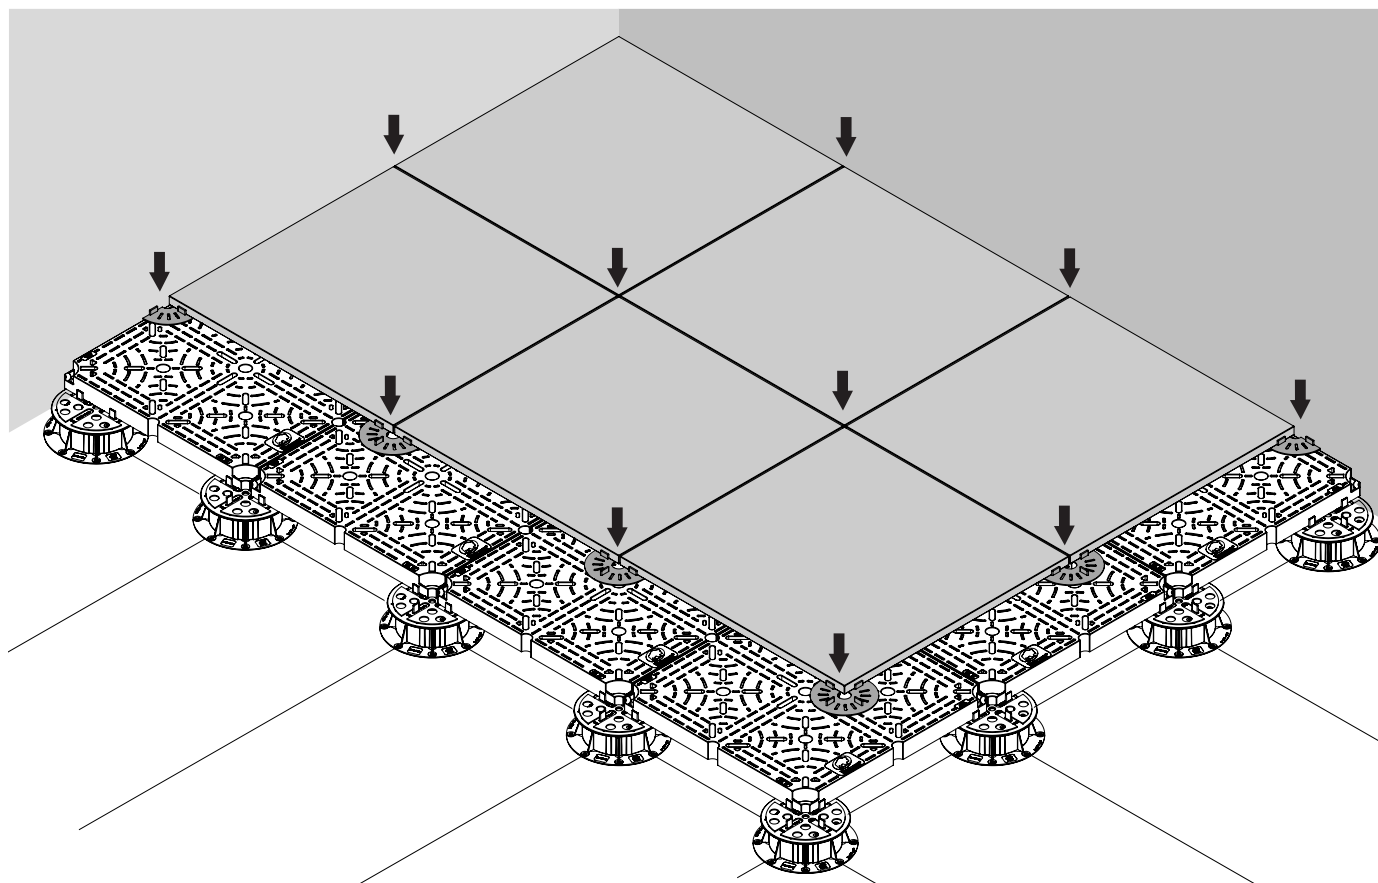

18 U-TRAY coupé

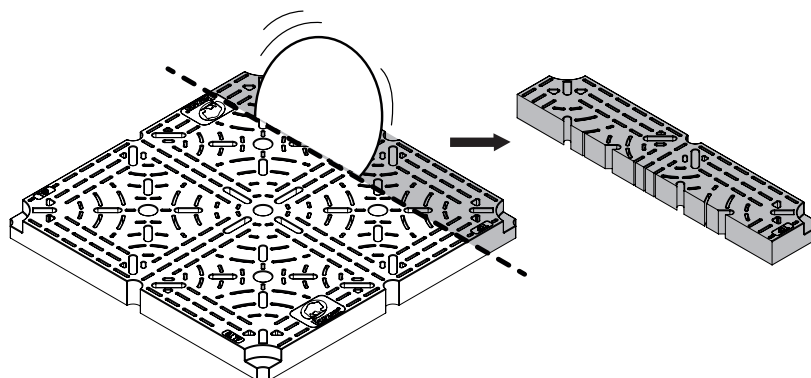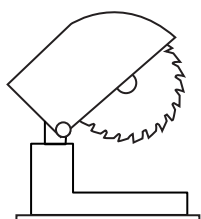

19

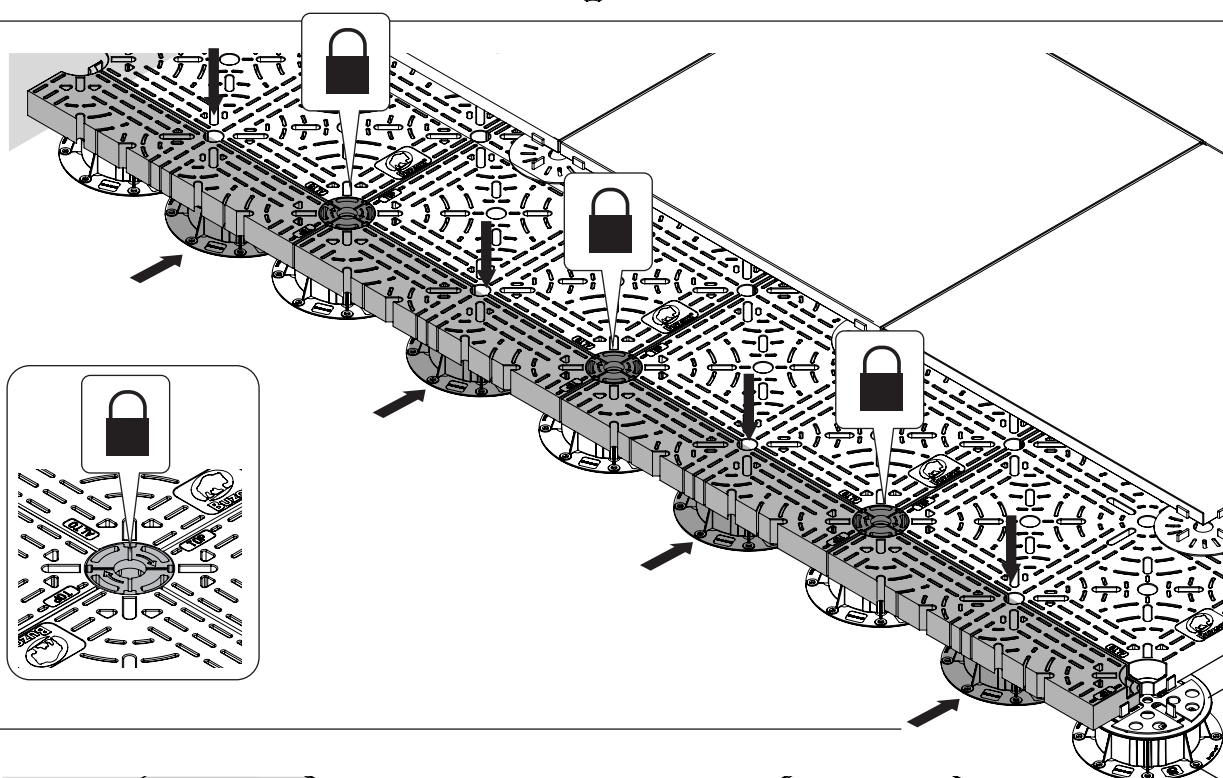

20

